


INSTALLATION INSTRUCTIONS FOR SHOP4WINDOWFILMS PURCHASE

You will require a sharp blade or knife, a squeegee, spray bottle and some tissues.
Ensure that the film is kept clean whilst handling.
DO NOT fold or crease the film.

THE FILM IS USUALLY APPLIED TO THE INSIDE OF YOUR WINDOW

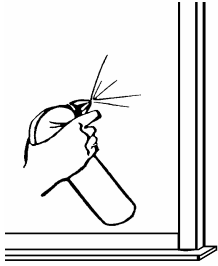

STEP 1

Thoroughly wet the glass with clean water containing a little washing up liquid.




STEP 2

Scrape the window clean using a window scraper or other similar tool.


STEP 3

Squeegee the window and dry with lint free a tissues/cloth. Wipe around the edge of the glass and frame. Re wet the glass using the same solution.

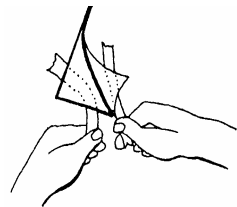

STEP 4

Separate the clear liner from the film using 2 pieces of sticky tape.

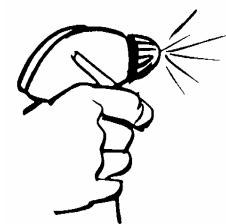


STEP 5

Using the same water and soap solution thoroughly soak the adhesive side of the film (the side the liner was attached to).




STEP 6

Place the adhesive side of the film on the glass leaving an overlap all way round the edge of the frame.

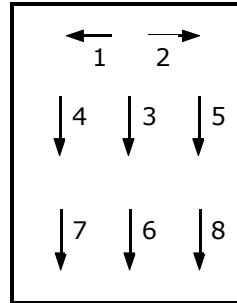


STEP 7

Wet the surface of the film and squeegee following this pattern.

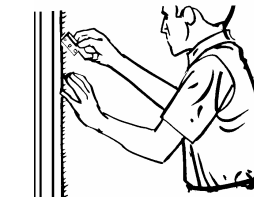

STEP 8

Trim the overlap with a Stanley blade or sharp knife leaving a 1-2mm gap

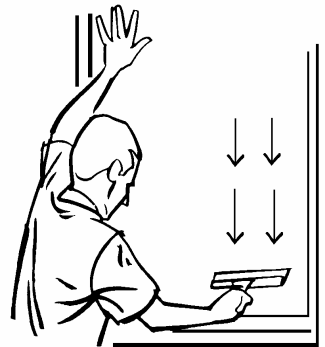

STEP 9

Wet the film again and squeegee using the same pattern as before.

STEP 10

Wipe any excess water from the film and around the frame.

www.shop4windowfilms.co.uk
c/o Sureguard Energy Services Limited
Sureguard House
3 Genesis Park
Sheffield Road
Rotherham
S60 1DX
Tel: 01709 838155
Fax: 01709 838779
E-mail: enquiries@sureguard.co.uk
www.shop4windowfilms.co.uk
www.sureguard.co.uk