


# INSTALLATION INSTRUCTIONS FOR SHOP4WINDOWFILMS PURCHASE

You will require a share blade or knife, a squeegee, spray bottle and some tissues.  
Ensure that the film is kept clean whilst handling.  
DO NOT fold or crease the film.

**THE FILM IS USUALLY APPLIED TO THE INSIDE OF YOUR WINDOW**

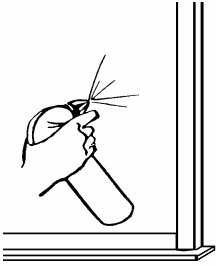

## STEP 1

Thoroughly wet the glass with clean water containing a little washing up liquid.




## STEP 2

Scrape the window clean using a window scraper or other similar tool.


## STEP 3

Squeegee the window and dry with lint free a tissues/cloth. Wipe around the edge of the glass and frame. Re wet the glass using the same solution.

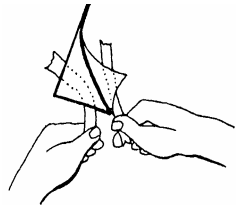

## STEP 4

Separate the clear liner from the film using 2 pieces of sticky tape.

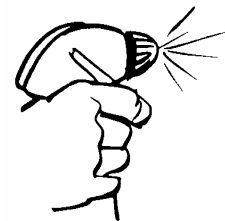


## STEP 5

Using the same water and soap solution thoroughly soak the adhesive side of the film (the side the liner was attached to).




## STEP 6

Place the adhesive side of the film on the glass leaving an overlap all way round the edge of the frame.

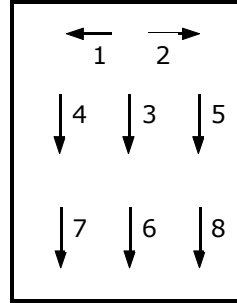


## STEP 7

Wet the surface of the film and squeegee following this pattern.

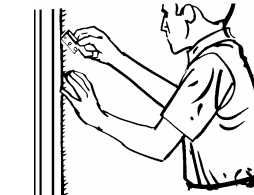

## STEP 8

Trim the overlap with a Stanley blade or sharp knife leaving a 1-2mm gap

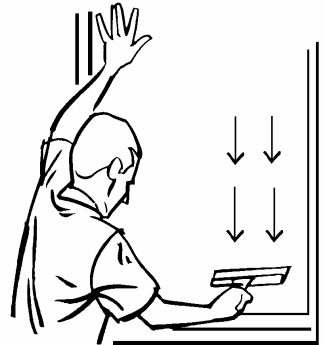

## STEP 9

Wet the film again and squeegee using the same pattern as before.

## STEP 10

Wipe any excess water from the film and around the frame.

[www.shop4windowfilms.co.uk](http://www.shop4windowfilms.co.uk)  
c/o Sureguard Energy Services Limited  
Sureguard House  
3 Genesis Park  
Sheffield Road  
Rotherham  
S60 1DX  
Tel: 01709 838155  
Fax: 01709 838779  
E-mail: [enquiries@sureguard.co.uk](mailto:enquiries@sureguard.co.uk)  
[www.shop4windowfilms.co.uk](http://www.shop4windowfilms.co.uk)  
[www.sureguard.co.uk](http://www.sureguard.co.uk)